



Option 16 — Remote Correction Factor

This is used to set the number and value of remote correction factors.

Note: REMOTE CF in Option 20 must be enabled before Option 16 can be turned ON.

To access the Remote Correction Factor menu in Program mode:

1. Press **P**.
2. Enter your **Advanced** access password, and then press **E**.
3. Press **2** to invoke the Quick Jump option.
4. Press **16** for the **Remote CF** menu, and then press **E**.

```
REMOTE CF IS  
>ON      ^v
```

The prompt for turning the Remote Correction Factor ON or OFF appears.

5. Use the arrow keys to select either **ON**, and then press **E**.

```
#OF RCF DATA PTS  
>2
```

The prompt for setting the number of data points appears.

6. Use the number keys to select up to 8 data points, and then press **E**.

```
RCF DATA PT1  
>1.00000000
```

The prompt for setting the first data point appears.

7. Use the number keys to enter a value, and then press **E**.

```
RCF1= 1.00000 AT  
>0.00000000 SFPM
```

The prompt for setting the flow rate for data point 1 appears.

8. Use the number keys to enter the flow rate, and then press **E**.

```
RCF DATA PT2  
>2.00000000
```

The prompt for setting the second data point appears.



9. Use the number keys to enter a value, and then press **E**.

```
RCF2= 2.00000 AT  
>10.0000000 SFPM
```

The prompt for setting the flow rate for data point 2 appears.

10. Use the number keys to enter the flow rate, and then press **E**.

The prompts repeat for each additional data point, and then returns to the PRG prompt.