



Option 1 — Zero Drift Check

To access the Zero Drift Check menu in Extended Utilities mode:

1. Press **E**.
2. Enter your **Extended Utilities** access password, and then press **E**.
3. Press **2** to invoke the Quick Jump option.
4. Press **1** for the **Zero Drift Check** menu, and then press **E**.

```
ZERO DRIFT CHECK
START TEST> YES
```

The Zero Drift Check prompt appears.

5. Press the arrow keys to select **YES** or **NO**.

```
ZERO DRIFT CHECK
IS RUNNING ...
```

The Zero Drift Check starts.

```
ZERO DRIFT CHECK
% DIFF = 0.100
```

The prompt showing the percentage difference appears.

```
Vin= 0.33000 V
Vout= 0.33034 V
```

The prompt showing the voltage appears.

6. Press **E** to return to the Util Mode Option prompt.